




MOUNTING DIMENSIONS

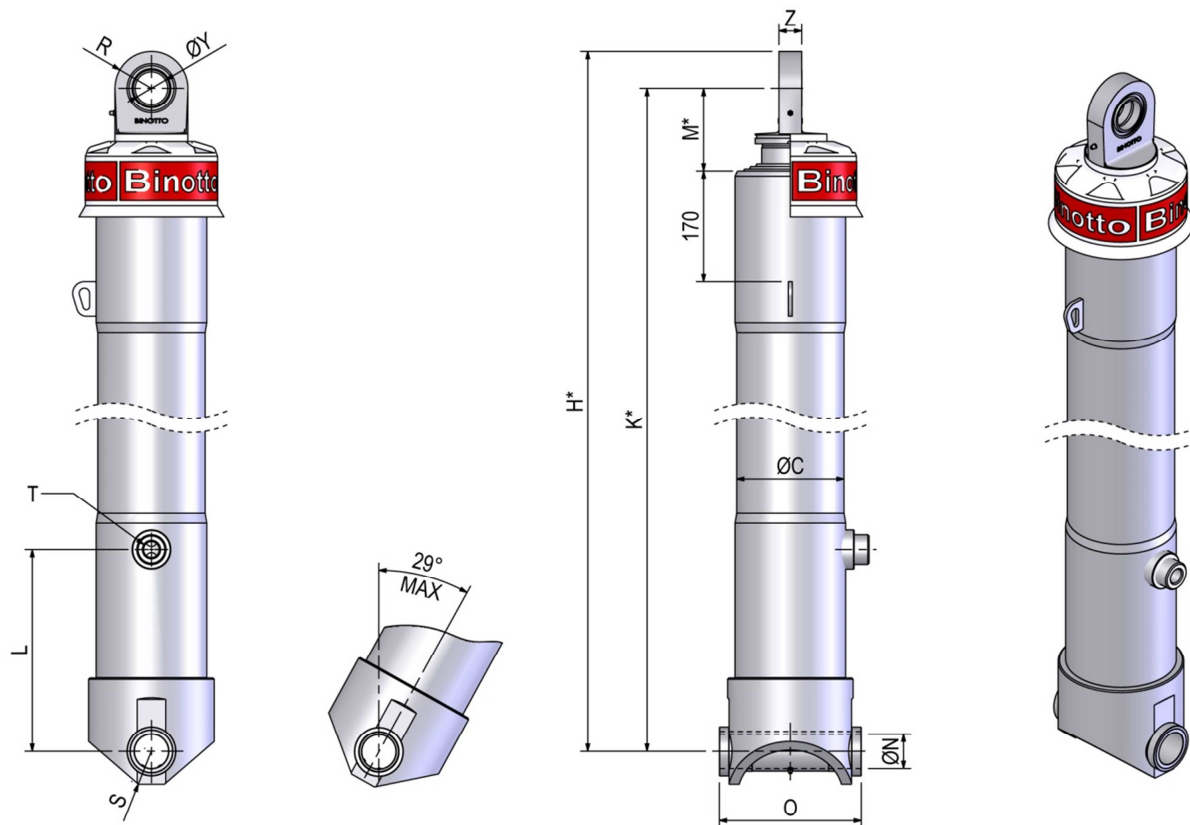

ØC	H*	K*	L	M*	ØN	O	R	S	T	ØY	Z
165 mm	1564 mm	1508 mm	310 mm	124 mm	52,5 mm	218 mm	56 mm	54 mm	3/4" BSP	50 mm	35 mm

TECHNICAL SPECIFICATIONS

Working Volume [lts]	47,4	Max. load (at first stage) [kN]	304
Max. Working Pressure [bar]	250	Max. extension speed [m/s] with ESV**	Less than 0,24***
Weight (only cylinder) [kgs]	178	Max. extension speed [m/s] w/o ESV**	Less than 0,18***

*Including 20 mm pull-out.

**ESV= End of Stroke Valve.

*** For different requirements/applications please contact the Binotto Technical Department.

Stage n°	1	2	3	4						Total Stroke
Ø Stage [mm]	Ø145	Ø126	Ø107	Ø088						
Stroke [mm]	1077	1077	1077	1077						4308
Thrust at 250 Bar [kN]	404,8	305,6	220,4	149,1						

The application of a telescopic cylinder is to lift up tipping bodies, loaded with different materials, in order to discharge this material during its extension. • This cylinder is designed as a lifting device only for loads along the longitudinal axis. • It must not be used as a structural member or be subject to side load. • Hydraulic oil temperature allowable range between -40°C and +80°C. • Chromed thickness: minimum 20 µm • For standard version, max. duration of extension is 2 hrs. • Cylinder is painted gray (RAL 7021) with a thickness conforming to the 480 hours neutral salt spray test as per ISO 9227 (ISO 10289, rating 9). • The max tipping weight that can be raised by the cylinder is the body weight plus the max payload. This value, calculated at the max pressure, is a rough indication of the tipping power of the cylinder and must be used as a first criteria for the selection of the cylinder. • The real tipping mass can only be calculated by the design engineer of the dump truck, and must take into account the geometry of the dump body and operating conditions. • Never exceed maximum cylinder load. • Never exceed maximum pressure. • For Pump flow selection, contact the Binotto Technical Department.

REMARKS

REVISIONS

V02: Special inlet size/position

The cylinder must always be sold together with Quick Instructions (QI) and User Manual (MU). Make sure they are included and check them carefully before installation, usage, service or repair.